

Wadia 581, 781, S7, S7i

Changing Display of Product Name

- Remove Disk from player
- Power Down
- Power Up, unit displays "Loading"
- Once units boots up, it will display "No Disc."
- On remote, push buttons 5,2,3,4
- Once done loading, the Main Menu will be displayed.
- Push the enter button on the remote to scroll through the display to reach the display of the product name
- Use the volume up or down arrow to scroll to the correct product name
- Push enter to select the correct product name
- Use the volume up or down arrow to scroll in the menu to "Configure, Save Changes ->YES." Hit the enter button on the remote to save the changes.